


TOOL Caddy Mounting Instructions

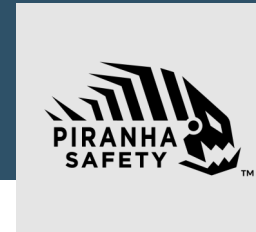

Step 1

Align edge of this instruction sheet with inside left hand edge of Decal plate. (See fig 1).


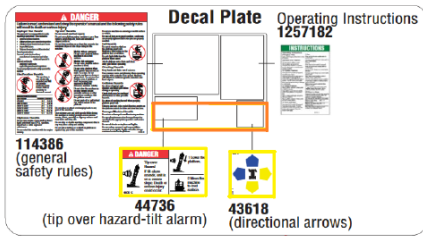


Figure 1

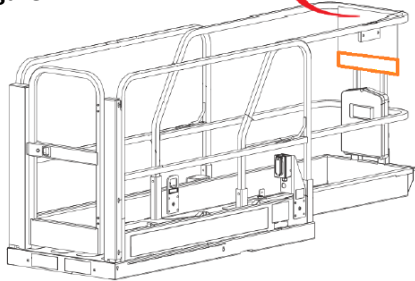

Step 2

Drill template will align 8" from left hand edge (center of Decal Plate). Using a 17/64 (H) drill bit, drill through template and Decal Plate.

All installation done from inside of basket



Step 3

Using supplied hardware, through bolt the Surface Mount and tighten. Lock Tool Caddy into position.



**** Instruction edge to center of drill template is 8"**

****Line up edge of instruction sheet with edge of plate.**
(See Fig 1)

****Line up dash line with bottom of mounting plate**

